

JVC LT32DP8BG USER MANUAL



Quick Links

- [Watching Digital Channels](#)
- [Setup](#)
- [Factory Settings](#)

Table of Contents

- [Watching digital channels](#)
- [favourite channels](#)
- [Display the programme information](#)
- [Select audio language](#)
- [Using EPG](#)
- [Customising your TV](#)
- [Timer](#)
- [Edit PR \(Edit PR List\)](#)
- [Configuration](#)
- [Setup](#)
- [basic connections](#)
- [factory settings](#)
- [troubleshooting](#)
- [Technical Information](#)
- [Other ManualsLib Projects](#)



ENGLISH
DEUTSCH
FRANÇAIS
CASTELLANO
ITALIANO
SUOMI
DANSK
SVENSKA

WATCHING DIGITAL CHANNELS
DIGITALE SENDER BETRACHTEN
REGARDER DES CANAUX NUMÉRIQUES
VISUALIZACIÓN DE CANALES DIGITALES
VISIONE DEI CANALI DIGITALI
DIGITAALISTEN KANAVIEN KATSELU
VISNING AF DIGITALE KANALER
TITTA PÅ DIGITALA KANALER



WATCHING DIGITAL CHANNELS

Before reading this manual

Read the separate user manual (INSTRUCTIONS), "IMPORTANT" section, and understand how to use the TV safely. After that follow the instructions in the "PREPARE" section to connect the aerial and other external devices to the TV, and configure the settings for the TV.

■ Specifications of your TV

Certain specifications differ depending on the version of the TV. Please check the specification of your TV from the following table. The last character in the model name indicates the version. For example, DP8BG means version "G".

Version	Countries that can receive digital terrestrial broadcasting (*1)	Languages that can be used for the on-screen displays (including DTV menus) (*2)
G	France, Germany, Spain	Castellano, Catalan, English, French, German
N	Denmark, Finland, Sweden	Danish, English, Finnish, Swedish
T	Austria, Italy, Switzerland	English, French, German, Italian

*1: Country selections available in the "Country" (P. 14) setting.

*2: Language selections available in the "Menu Language" (P. 14) setting.

Digital terrestrial broadcasting (DVB-T)

➡ Digital channels

Analogue terrestrial broadcasting (VHF / UHF) and analogue cable TV


➡ Analogue channels

This manual only provides information on watching digital channels. Other information is explained in the "INSTRUCTIONS". Please read both this manual and the "INSTRUCTIONS" manual.

Contents

Watching digital channels	2
Display the programme information	4
View subtitles	4
Select audio language	5
View teletext	5
Using EPG	6
Customising your TV	8
Timer	10
Edit PR (Edit PR List)	12
Configuration	14
Setup	16
Installation	18
Troubleshooting	20
Technical Information	22

Watching digital channels

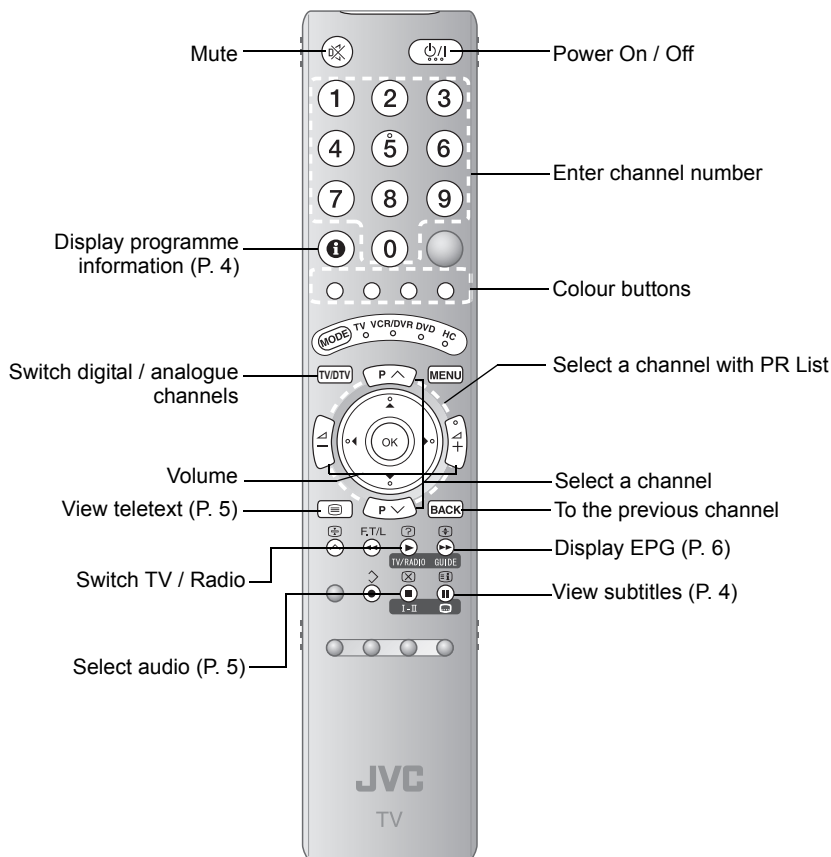

For more information, please read the user manual (INSTRUCTIONS).

- Buttons on the remote control unit or the TV buttons.
 - ➡ "Names of all the parts"
- To watch pay-TV digital channels.
 - ➡ "Basic connections"
- To soften the picture for daily use, change the "Picture Mode" setting in the "Picture" menu.
 - ➡ "Customising your TV"
- Useful functions for everyday TV viewing.
 - ➡ "Useful functions"
- Available functions in the menu.
 - ➡ "Customising your TV"

1

Power on

The green power lamp on the TV lights

- Press again to turn the screen off and put the TV into standby mode.
- To completely turn off the TV, unplug the power plug.

- The remote control doesn't work



- Confirm the mode is set to "TV".

2

Switch to digital channels

- Switch TV/RADIO



3

Select a channel

- Enter a channel number



E.g.

1 : 0 → 0 → 1
15 : 0 → 1 → 5

- Move up or down a channel

P ^ up



P v down

- You can select only from your favourite channels
⇒ "Favourite Mode" (P. 15)

- Select with PR List



PR List



- Close PR List
- You can select only from your favourite channels
⇒ "Favourite Mode" (P. 15)


- If you cannot display the PR List by pressing the "OK" button, press the "i" button three times to display the PR List.

- Select with EPG (Electronic Programme Guide)

EPG



Channels




- Display only programmes which match your selected genre
⇒ "Genre" (P. 7)

Note

- Add a new station. ⇒ "Service Scan" (P. 18)
- Edit the "PR List" (digital channel list) according to your liking.
⇒ "Edit PR (Edit PR List)" (P. 12)
- Some digital channels cannot be watched on this TV. ⇒ (P. 22)

Watching digital channels

Display the programme information

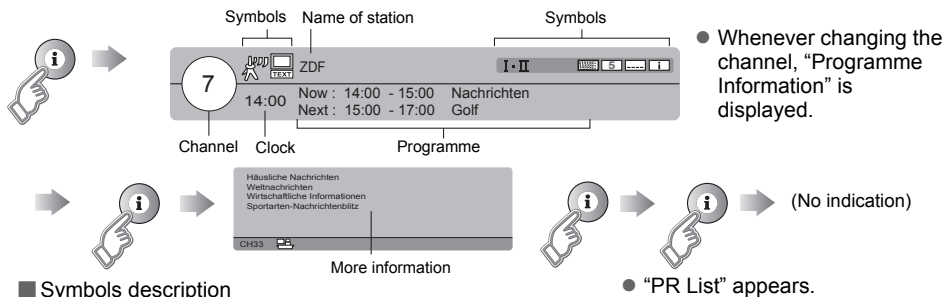

: Reception level

Red

Yellow

Green

: Poor : Acceptable : Excellent



: TV programme



: Radio programme

TEXT: Teletext is available (P. 5).

I-II : I : Audio in another language is not available.

II : Other audio languages are available (P. 5).



: Pay-TV channel



5 : Minimum viewing age limit of the programme.

Set viewing age limit. ➡ (P. 15)



: Subtitles are available (P. 4).




: More information about the programme is available.




Dolby Digital : Dolby Digital signal is output from the DIGITAL AUDIO OUT terminal (P. 23)

View subtitles

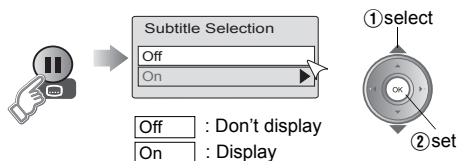

- By default, the language set in "Subtitle Language" (P. 14) is automatically selected. When not broadcast in that language, another broadcast language is automatically selected.
- When no subtitles are broadcasted, "No Subtitles" is displayed.

Switch to another language

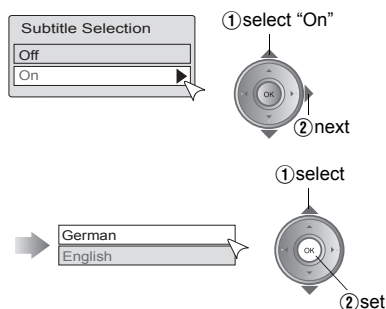


⦿ : Special subtitles for the hearing impaired
Undefined: When the subtitle's language cannot be identified

- The language that can be selected depends on the broadcast.

Select audio language

By default, the language set in "Audio Language" (P. 14) is automatically selected.
When not broadcast in that language, another broadcast language is automatically selected.

■ Switch to another language

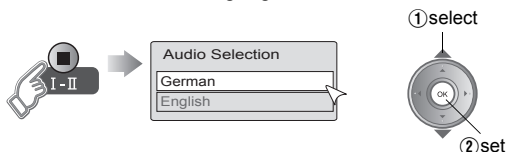


: Special audio track for the visually impaired

Undefined: When the audio's language cannot be identified



Dolby: Dolby Digital

- The language that can be selected depends on the broadcast.
- Please read "Dolby Digital" output from the DIGITAL AUDIO OUT terminal" (P. 23) before selecting "Dolby".

View teletext

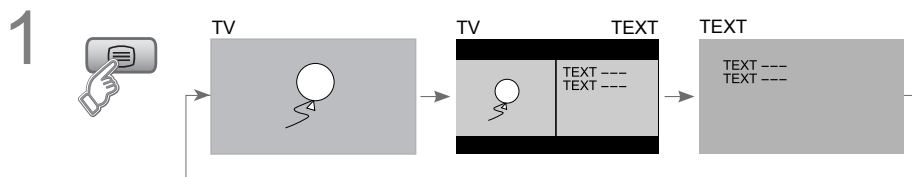

2 Select a page

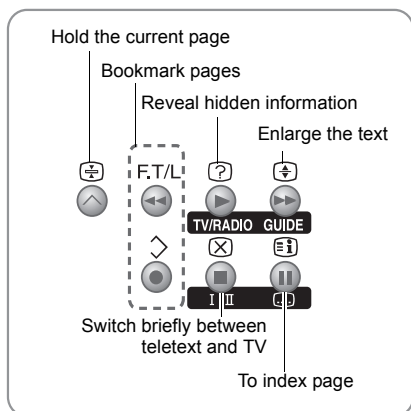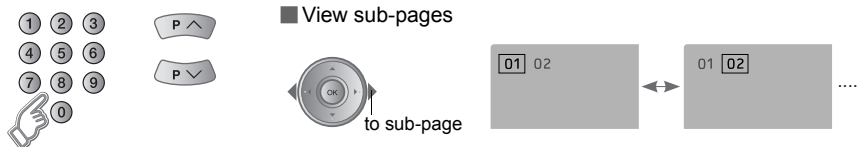

For more information, please read
"Viewing teletext" on the user
manual (INSTRUCTIONS).

Using EPG (Electronic Programme Guide)

You can find a digital channel programme from an eight-day programme guide, check its information, and make a reservation.



1 Display EPG

 **Switch TV/RADIO** 

● EPG will be displayed only when viewing digital channels.

2 Find a programme

Genre  TV  Radio



Date
Channel
Programme

Genre icon

 General	 Music
 Movie	 Culture
 News	 Current Affairs
 Entertainment	 Education
 Sports	 Leisure
 Children	 Special


Check programme information 

Close EPG 

● The genre types that can be selected differ depending on the country selected in the "Country" (P. 14) setting.

- When the clock is off ⇒ "Time Zone" (P. 14)
- Select the default language for programme name and programme information ⇒ "EPG Language" (P. 14)


■ Watch / listen to the programme



■ Reserve the programme

- Select a column (Date / Channel / Programme)

■ Select a date / a channel / a programme

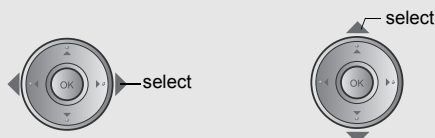



Next

Genre


Display only programmes which match your selected genre

1 Display the genre list
(green)

2 Select a genre

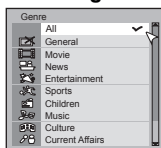


■ Quick search



- More than one genre can be selected.

- Only one genre can be selected.

3 Find a programme

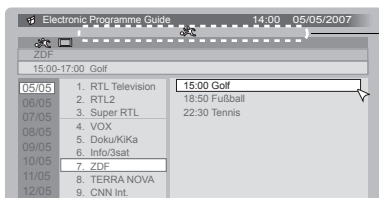



Your selected genres are displayed

- Only programmes in the selected genre are displayed.

Timer

Reserve a programme to watch and record



1 Display the timer select menu



Record : Reserve a programme to record
Remind : Reserve a programme to watch

2 Set "Timer"

- ➔ Proceed to 2 in "Timer" (P. 10)

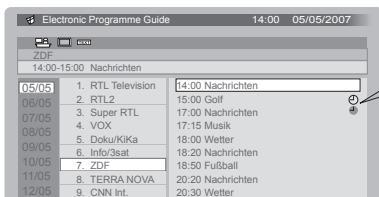

(red): Reserve to record
 (blue): Reserve to watch
 ⌚ : Reservation time is shorter than the broadcasting time

Customising your TV


1 Display the DTV menu

Display the menu bar



Select "DTV" (DTV)

Note


- If you cannot display the DTV menu, switch to digital channels.



2 Display the desired menu

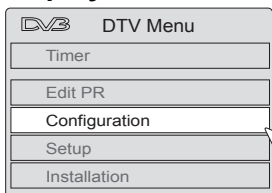

3 Change the setting

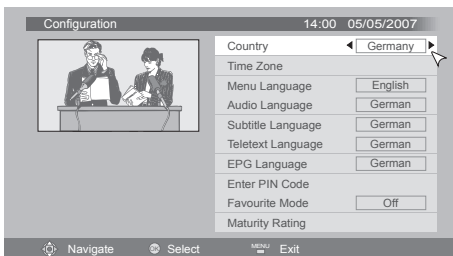


■ To the previous screen

➔ BACK

Note

- You cannot display the DTV menus while the "Record" timer is in progress.

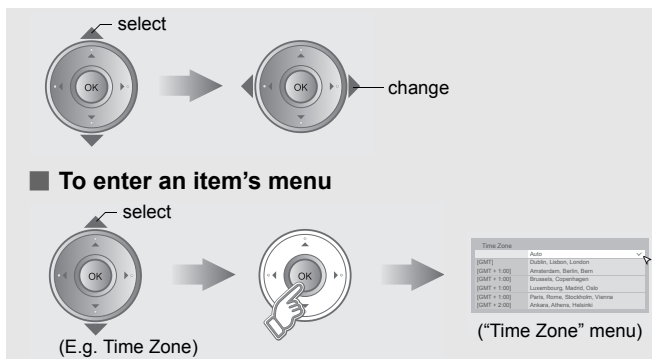


4 Close the menu



■ When entering the PIN code


When watching digital channels or changing DTV menu settings, it may be necessary for you to enter a PIN code.

Once a PIN code has been entered, there is no need to enter it again until the TV is turned off.




- The default PIN code is "0000".
- You can set your own PIN code. ➡ "Enter PIN code" (P. 15)

■ When a message with option selections appears




■ When an information message appears



Customising your TV

Timer

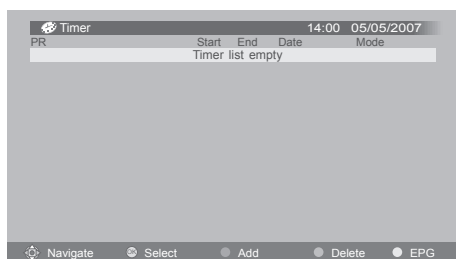




■ Switch TV/RADIO



● Up to 20 programmes can be reserved.

1

Display the timer select menu



Record : Reserve a programme to record

Remind : Reserve a programme to watch

2


Programme the timer setting

- If you select the programme using "EPG" (P. 6), all items will be set automatically. Change the setting if necessary.

Record	
PR	ZDF
Start	17:15
End	18:00
Date	05/05/2007
Mode	Once
Audio	PCM / Analogue
Subtitle	Off
Maturity Rating	Lock


Remind	
PR	ZDF
Start	17:15
Date	05/05/2007
Mode	Once

- PR** : Select the channel
Start / End / Date : Enter the time and date
Mode : Select the reservation mode (Once, Daily, Weekly)
Audio : Normally set to "PCM / Analogue". For details, see "Dolby Digital" output from the DIGITAL AUDIO OUT terminal" (P. 23).
Subtitle : Set subtitle recording (Off, On)
Maturity Rating : Lock the recording with the maturity rating (Lock, Unlock)

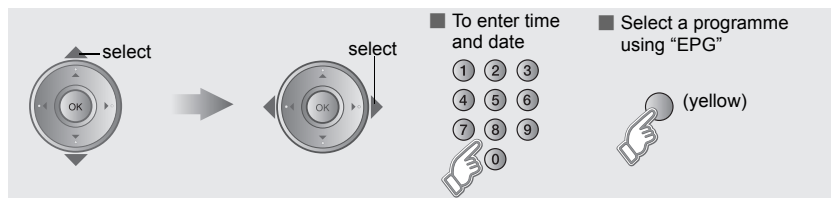

3

Set the timer



(red) Record



(blue) Remind



TV



Radio

When "Maturity Rating" is set to "Unlock"

- A message will be displayed if there is problem with the reservation.
- When you reserved the programme using EPG, EPG will be displayed.
- When "Remind" timer is set, "End" will be displayed as "----".


■ Cancel a reservation



select




(green)



① select "Yes"

② cancel reservation

■ Change a reservation



① select

② display the menu



Change the settings

4

Prepare for recording before the timer starts

Record

Set the recording device as follows. At the start time, the programme will be output from the EXT-2 terminal to the recording device.

- If you use a "T-V LINK" compatible device, set it to the external input mode then to the standby mode. At the start time, the device will start recording automatically. Make sure the recording times of other recordings on the recording device do not overlap with recording times on the TV. Some "T-V LINK" devices may not work correctly. It is recommended to do a recording test.

"What is "T-V LINK"?"



INSTRUCTIONS

"Technical Information"

- If you use a "T-V LINK" incompatible device, manually set the device's timer to record the external input at the same recording times set on the TV. For details, refer to the device's manual.
- The power lamp on the TV will start blinking 3 minutes before the start time (green or red). Then, it will light during recording (green or orange).
- To stop the recording while a "Record" timer is in progress, press to display the message "Stop Recording?". Then press the "OK" button.


Remind

The "Remind" timer does not turn the TV on or off. Turn the TV on before the timer starts. At the start time, the channel will automatically change.


Customising your TV






Edit PR (Edit PR List)

Deleting unwanted channels, and changing the channel number or channel name can be done in the PR List (digital channel list) according to your liking.

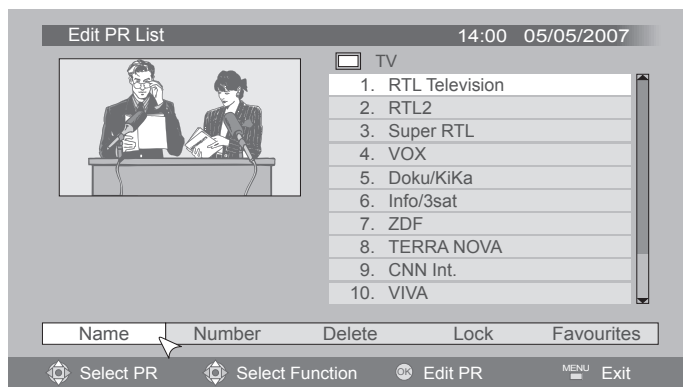


Edit channels

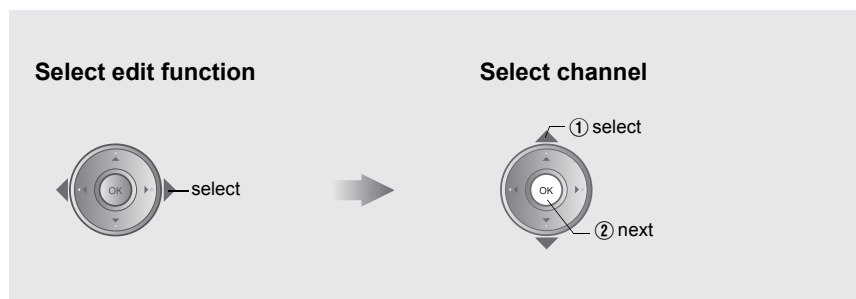

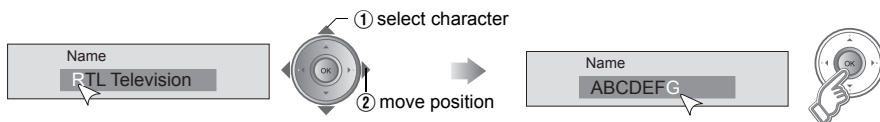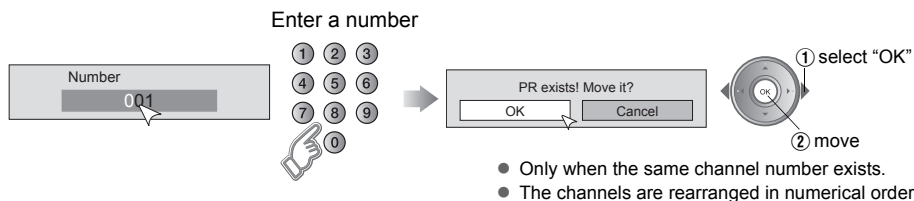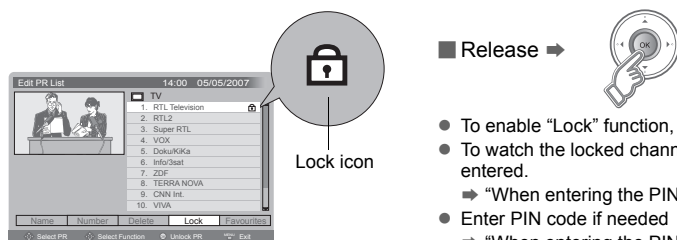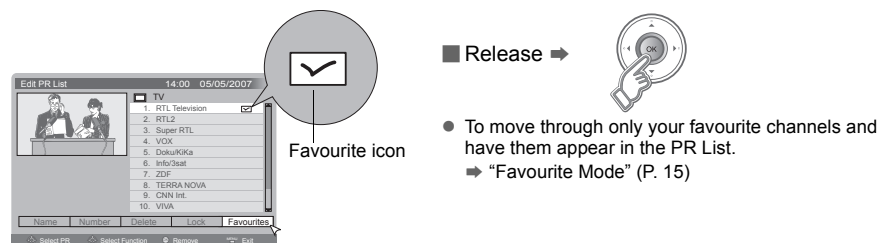Name**Edit a channel name****Number****Change a channel number****Delete****Delete a channel****Lock****Stop children from watching specific channels****Favourites****Register your favourite channel**

Customising your TV

Configuration

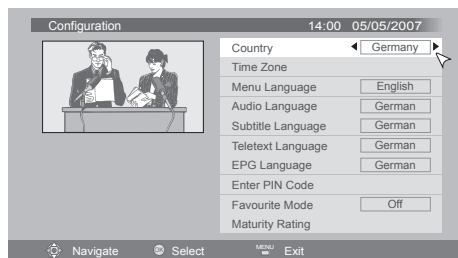

Note

- When not broadcast in the default language, on-screen displays and audio output in that language are not available. In this case, the language that can be displayed and heard depends on the broadcast.

*1, *2: The countries and languages that can be selected in the "Country" and "Menu Language" settings differ depending on the version of the TV.
 ➔ "Specifications of your TV" (P. 1)

*3: The languages that can be selected differ depending on the "Country" setting.


Country

Select the country of installation (*1)

Time Zone

Set the time zone if the clock is off (inaccurate)

Time Zone	Auto
[GMT]	Dublin, Lisbon, London
[GMT + 1:00]	Amsterdam, Berlin, Bern
[GMT + 1:00]	Brussels, Copenhagen
[GMT + 1:00]	Luxembourg, Madrid, Oslo
[GMT + 1:00]	Paris, Rome, Stockholm, Vienna
[GMT + 2:00]	Ankara, Athens, Helsinki

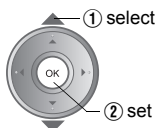

- Select the city or country nearest to your residence.
- Normally set to "Auto".

Menu Language

Language for on-screen displays when watching digital channel including the DTV menus (*2)

Audio Language

Select a default language for audio (*3)

- For visually impaired



Subtitle Language

Select a default language for subtitle (*3)

- For hearing impaired




Teletext Language



Select a default language for teletext (*3)

EPG Language



Select the default language for programme name and programme information (*3)

Enter PIN code**Change PIN code****1 Input the current code**

- Default is "0000".
- If you forget the code, input "0081".

2 Input a new code twice**3****Favourite Mode****Enable your favourite channels (On / Off)**

- If you cannot select "On", register channels in "Favourites" first ➡ "Favourites" (P. 13)
- When you set "Favourite Mode" to "On", you cannot change from TV to Radio if no radio channel is registered to the favourite channels.

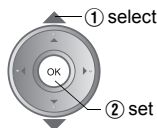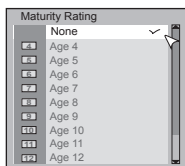
Maturity Rating**Set the viewing age limit**

- Only programmes with a maturity rating can be restricted.
- To watch the restricted programme, the PIN code must be entered.

- The maturity rating may differ depending on the "Country" setting.

Customising your TV

Setup

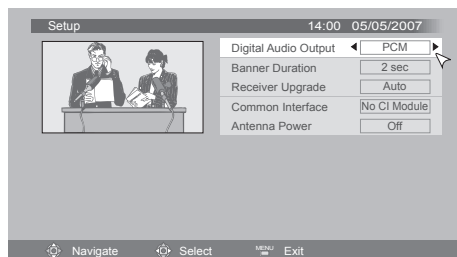

Digital Audio Output

Output the digital signal from the DIGITAL AUDIO OUT terminal.

PCM : The Linear PCM signal is output

Dolby Digital : The Dolby digital signal is output when the Dolby Digital signal is received

- Please read "Dolby Digital" output from the DIGITAL AUDIO OUT terminal" (P. 23) before setting.

Banner Duration

Select the display time for channel information
(2 sec / 5 sec / 8 sec)

Receiver Upgrade


The TV will automatically search for new tuner software and run the reception test (for digital channels) at midnight (3 AM) on a daily basis. You can select the desired operation with this setting.

- The Receiver Upgrade function works only when the TV is off (standby).
- If new software is available, the TV will automatically download and upgrade the tuner software.
- If the TV detects channels that became receivable or if the TV was not able to receive a certain channel, a message about updating the PR List will be displayed when the TV is turned on.
 - ➡ "Updating the PR List" (P. 22)

Auto : The search for new software and the reception test will operate at midnight. In addition, the TV will start searching for new software whenever the TV is turned off. Normally set to "Auto".

Manual : Only the search for new software will operate at midnight. The reception test will not be run. In addition, you can start searching for new software whenever you want.

To start searching, select "Manual" and press "OK" button.



Select "Search for new" and press "OK" button. Then, follow the instructions on the screen.

In standby: Upgrade the software automatically when the TV is turned off.

Common Interface

To watch pay-TV digital channels, use the Conditional Access Module menu. This function can only be used when pay-TV can be received in your region.

When the Conditional Access Module etc. is inserted after subscribing to the broadcasting company, this function is available.

- "Watch pay-TV digital channels" ➡

INSTRUCTIONS
"Basic connections"

- If the Conditional Access Module etc. is not inserted, "No CI Module" will be displayed and this function cannot be used.

Press "OK" button to display the Conditional Access Module menu and follow the instructions on the screen.

- The content of the menu is different depending on the broadcasting company.
 - ➡ For details, consult your broadcasting company.
- The language shown in the menu may differ from the "Language" set for the TV.

Antenna Power


When using an indoor aerial which requires external power, set "Antenna Power" to "On".

The TV will supply DC 5V, 50mA (max) from the aerial socket through the cable to the aerial.

- Please read "Power supply for the indoor aerial" (P. 22) before setting.


Customising your TV

Installation

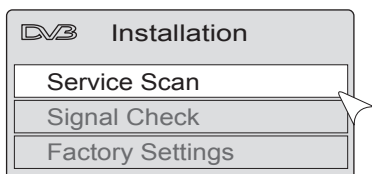

Service Scan

Update the PR list

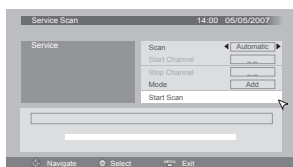

Scan

Select a "Scan" type

Automatic

: Scan all receivable channels

Manual

: Scan between the "Start channel" and "Stop channel"

Network

: Scan all receivable channels, then you can select the broadcasting stations to register

Start channel

Stop channel

If you select "Manual", select the broadcast channel numbers to start and stop scanning.

Mode

Select a "Mode"

Add

: Register only new channels and update the PR list. The current PR list settings will not be changed. No channel will be deleted.



Reinstall

: Re-install all channels. The current PR list settings and "Timer" settings will be cancelled. The channels which the TV could not receive will be deleted.



■ To update the PR list

Set "Scan" to "Automatic" or "Network". If you want to retain the current PR list settings and "Timer" settings, set "Mode" to "Add". Then start "Service Scan".

■ To start "Service Scan".

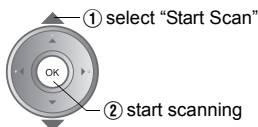

- If you set "Scan" to "Network", the "Network" menu appears. Select broadcasting stations from a list.

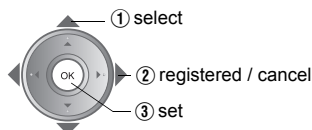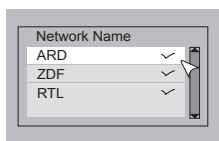


Signal Check



You can check the broadcast signal level of the channel you are watching.

Signal level: **Poor** < **Acceptable** < **Excellent**



- To check another broadcast channel



The "Channel" is the frequency of the digital broadcasting. It differs from the channel number displayed on the TV.

Factory Settings


All registered digital channels are deleted and the DTV menu settings are initialised. Digital channels are reregistered.



Initial setting will start again.



- If "Attenuator" is set to "On", "RF Attenuator" menu will appear during initial setting. Select "On" or "Off" and press "OK" button. For more details on "Attenuator" ➔



Troubleshooting

Messages	Actions	Page
"Missing or weak signal"	- Is the TV connected correctly to the aerial? - Change the direction of the indoor aerial. - Is there a digital channels transmission tower nearby? ➡ Turn "Attenuator" to "On". INSTRUCTIONS "Technical Information" - Check digital channels signal with "Signal Check". - If you still cannot watch the digital channels after following the steps above, there may be a problem with your aerial or its cable. Or, the signal may be too weak. ➡ Consult your retailer	19
"Dolby Digital selected! No analogue audio available"	- When "Dolby Digital" is selected in "Digital Audio Output", the sound of a programme containing "Dolby Digital" signals cannot be output from the TV or the audio system connected to the AUDIO OUT terminal. - When the channel is changed, a message will be displayed for a few seconds. - To listen with the TV or audio system ➡ Select a language without "Dolby" from "Audio Selection" ➡ Switch "Digital Audio Output" to "PCM"	23 5 16
"Services have changed. Do you want to Update PR list?"	- Update the PR List (digital channels) ➡ "Updating the PR List" - If the message appears even though PR List updating is not required, set "Receiver Upgrade" to "Manual" to cancel the reception test at midnight.	22 16
"Timer Starting Soon" or "Reminder Changing PR"	While watching TV, the message appears when a timer programme is about to start, indicating that the channel will be switched.	—
"Stop Recording?"	The message appears when you perform operations related to the digital channels while a "Record" timer is in progress. Press the "TV/DTV" button to continue recording or press the "OK" button to stop the recording.	—

Problem	Actions	Page
Remote control stops working	● Unplug TV, several minutes later plug it in again.	–
Digital channel screen is frozen	● Hold down “TV/AV” button and “MENU/OK” button on the TV simultaneously for three or more seconds to restart.	–
TV/RADIO button do not work	● Set the “Favourite Mode” to “Off” (P. 15) and register both Radio and TV channels in “Favourites” (P. 13). Then set “Favourite Mode” to “On”.	15 13
No picture, no sound	● Some digital channels cannot be watched on this TV.	22
Forgot my PIN code!	● The default PIN code is “0000”. If you forget the numbers that you used to change the default PIN code, first input “0081” in the “Enter PIN code” and then register a new PIN code.	15
Locked channels can be watched without inputting PIN code	● Once the PIN code is input, the lock functions (“Lock” and “Maturity Rating”) are released. If you want to use the lock functions again, turn the TV off and then turn it on again.	–
When the clock is off time	● Change the “Time Zone” setting.	14

If you encounter other problems, please read the “Troubleshooting” section on the user manual (INSTRUCTIONS).

Technical Information

Power supply for the indoor aerial

When using an indoor aerial which requires external power, set "Antenna Power" to "On". The TV will supply DC 5V, 50mA (max) from the aerial socket through the cable to the aerial.

- Supplying power to outdoor and indoor aerials which does not require external power, may cause damage to the aerial. If you are uncertain whether the aerial needs external power, select "Off".
- Connect the aerial directly to the TV. When a recording device is connected between the aerial and the TV, power cannot be supplied to the aerial.
- Power is supplied to the aerial only when the TV is on.
- To change the setting after "Initial settings" is complete → "Antenna Power" (P. 17)

Digital channels that cannot be watched on this TV

If a digital channel service uses new formats (such as DVB-H or MPEG4, etc.), or MHP, it cannot be watched even though the channel name appears.

If the channel is selected, the picture will not appear and audio cannot be heard.


- You can delete these channels by using the "Delete" in the "Edit PR"
 - ⇒ "Edit PR (Edit PR List)" (P. 13)

Updating the PR List (Digital channel only)


The TV will run the reception test (for digital channel) at midnight (3AM) on a daily basis.

If the TV detects channels that became receivable or if the TV was not able to receive a certain channel, a message about updating the PR List will be displayed when the TV is turned on.

- The reception test will only operate when the TV is in standby. It will not operate when the TV is turned on.
- The reception test will not operate when "Receiver Upgrade" (P. 16) is set to "Manual".
- If the TV does not detect any channels that need to be updated, a message will not be displayed.




■ To update the PR List right away



Run the "Service Scan" (P. 18)

- The "Service Scan" will take a few minutes.

■ To update the PR List later



- Next time you turn on the TV, the message will not be displayed. But you can update the PR List using "Service Scan" (P. 18) whenever you want to.

“Dolby Digital” output from the DIGITAL AUDIO OUT terminal

Some digital channels are broadcasted with “Dolby Digital” signals.
In these cases, “Dolby Digital” signals can be output from the DIGITAL AUDIO OUT terminal.

- 1 Connect an audio system with a “Dolby Digital” decoder to the DIGITAL AUDIO OUT terminal.



INSTRUCTIONS

“Connecting external devices”

- 2 Change the “Digital Audio Output” setting from “PCM” to “Dolby Digital”. (P. 16)

- When changing the setting, the message “Dolby Digital selected! No analogue audio available” may be displayed for a few seconds.
 - Each time the channel is changed to a channel that is broadcast with “Dolby Digital” signals, the message “Dolby Digital selected! No analogue audio available” may be displayed for a few seconds.
 - Even if “Dolby Digital” is set, “linear PCM” signals will be output by a channel that is not broadcast with “Dolby Digital” signals. Set the audio system so that it is compatible with both “Dolby Digital” and “linear PCM”. (For details, refer to the audio system instruction manual.)
- Set “Digital Audio Output” to “PCM” in the following cases.
The sound of a channel broadcast with “Dolby Digital” signals cannot be heard even when “Dolby Digital” is set.
- When listening with the TV speakers.
 - When listening with an audio system that does not have a “Dolby Digital” decoder.
 - When listening with an audio system that is connected to the AUDIO OUT terminal.
 - When recording a programme.
- When “(Dolby)” is displayed in the “Audio Selection” menu (P. 5), selecting “(Dolby)” will change the “Digital Audio Output” setting to “Dolby Digital” temporarily.
- A message recommending you to change the “Digital Audio Output” setting to “Dolby Digital” is displayed for a few seconds.
- If you want to record a “Dolby Digital” signal using timer-record (P. 10), change “Audio” of the timer-record setting from “PCM / Analogue” to “Dolby Digital”. However, if the setting is changed to “Dolby Digital”, you cannot record analogue sound with a recording device that is connected to the EXT-2 terminal.
- “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

For more information, please read the “Technical Information” section on the user manual (INSTRUCTIONS).

Memo



Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages